

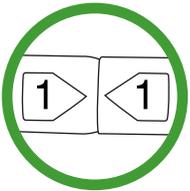


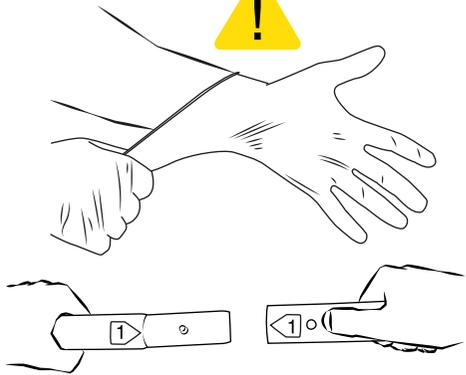



Formulate a S

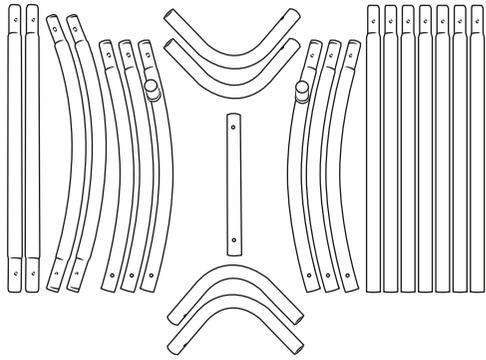



1

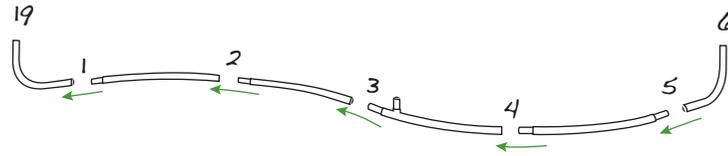

2

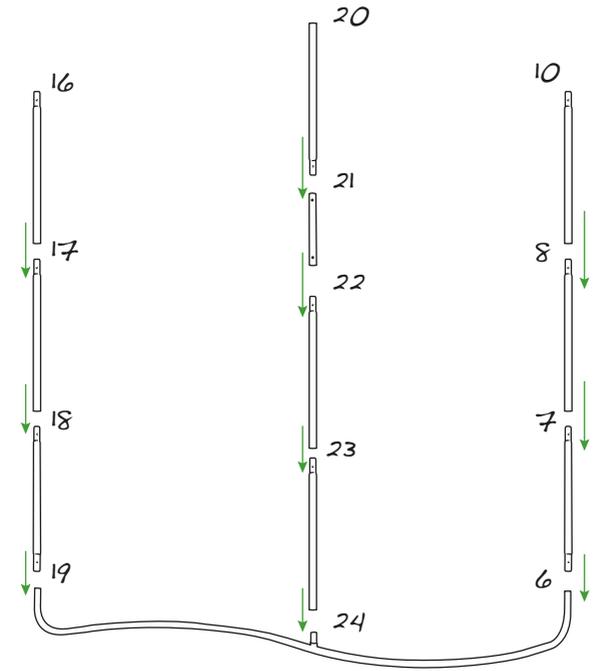

3

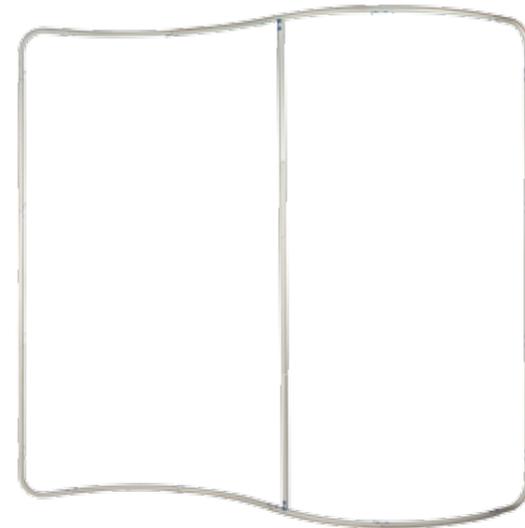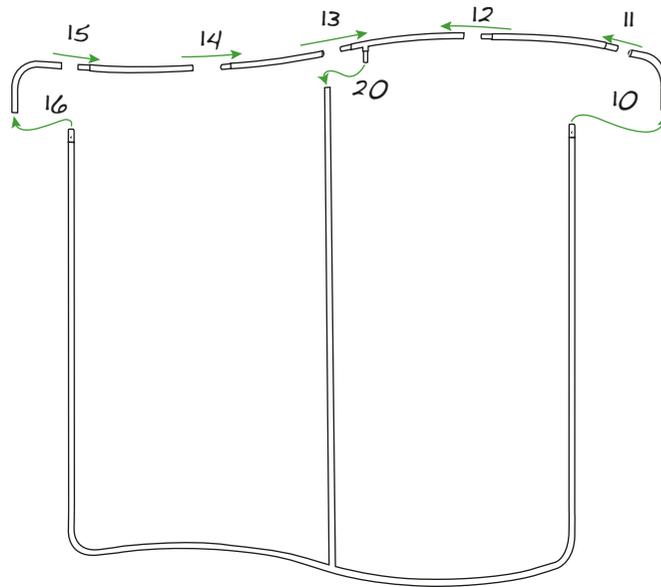


FORMULATE


Important note: These instructions are based on assembling the 2.4m version. Other size kits will have slightly different configurations of poles but can still be assembled in the same way.




1

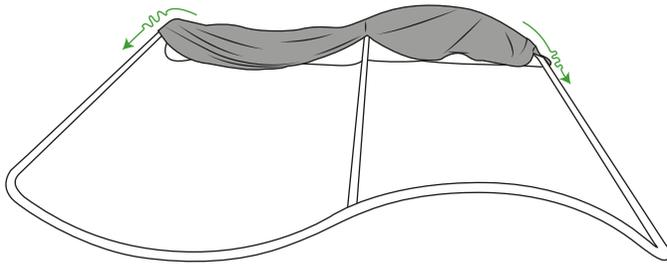


2

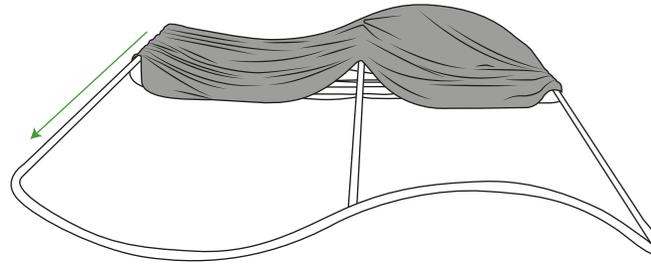



3

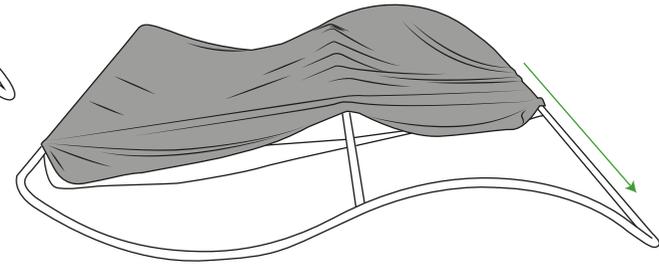

4

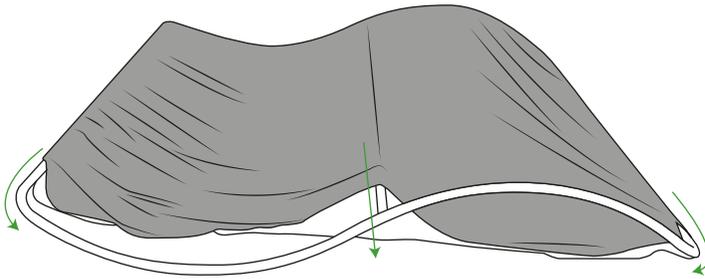

5

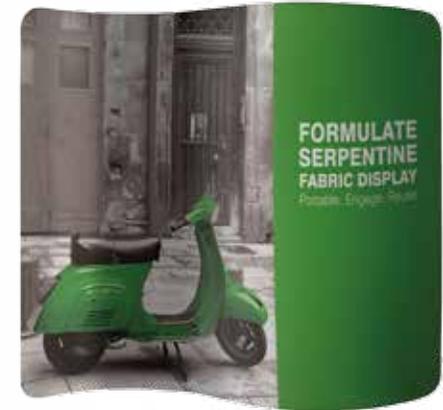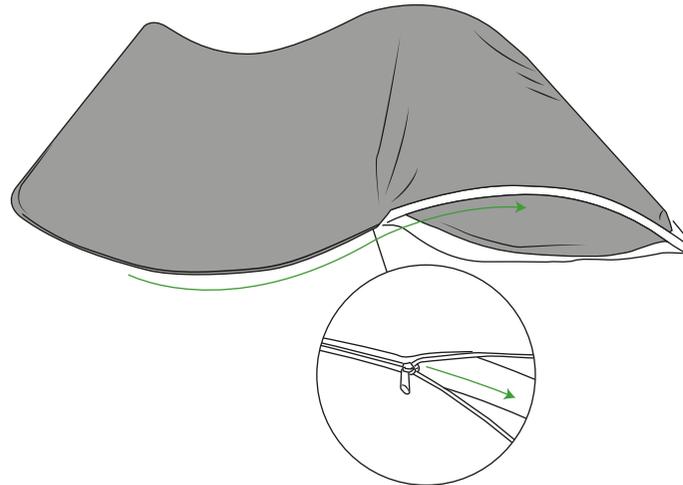

FORMULATE